



Audio Video Security Systems Inc.

5112 77th Place NE Suite 200

Marysville WA 98270-2044

360-651-2627

Napco Gemini 1632

CHANGE USER CODES

- 1) Enter user code
- 2) Press the **FUNCTION** key until **PROGRAM MODE** appears
- 3) Press the **INTERIOR/YES** button.
The cursor will be under the user position (U01 ####)
- 4) Enter the two digit user position (01-32)
- 5) Press the **FUNCTION** key until the cursor is under the 1st code # (U01 ####)
- 5) Enter the new code (2 – 6 digits)
- 6) Press the **ON/OFF** button to save the new code
- 7) Enter a new user position or
- 8) Press **RESET** 3 times to exit the program mode